


FENDER PROTECTOR

< ON-VEHICLE REPAIR >

FENDER PROTECTOR FENDER PROTECTOR

FENDER PROTECTOR : Exploded View

INFOID:000000004466903

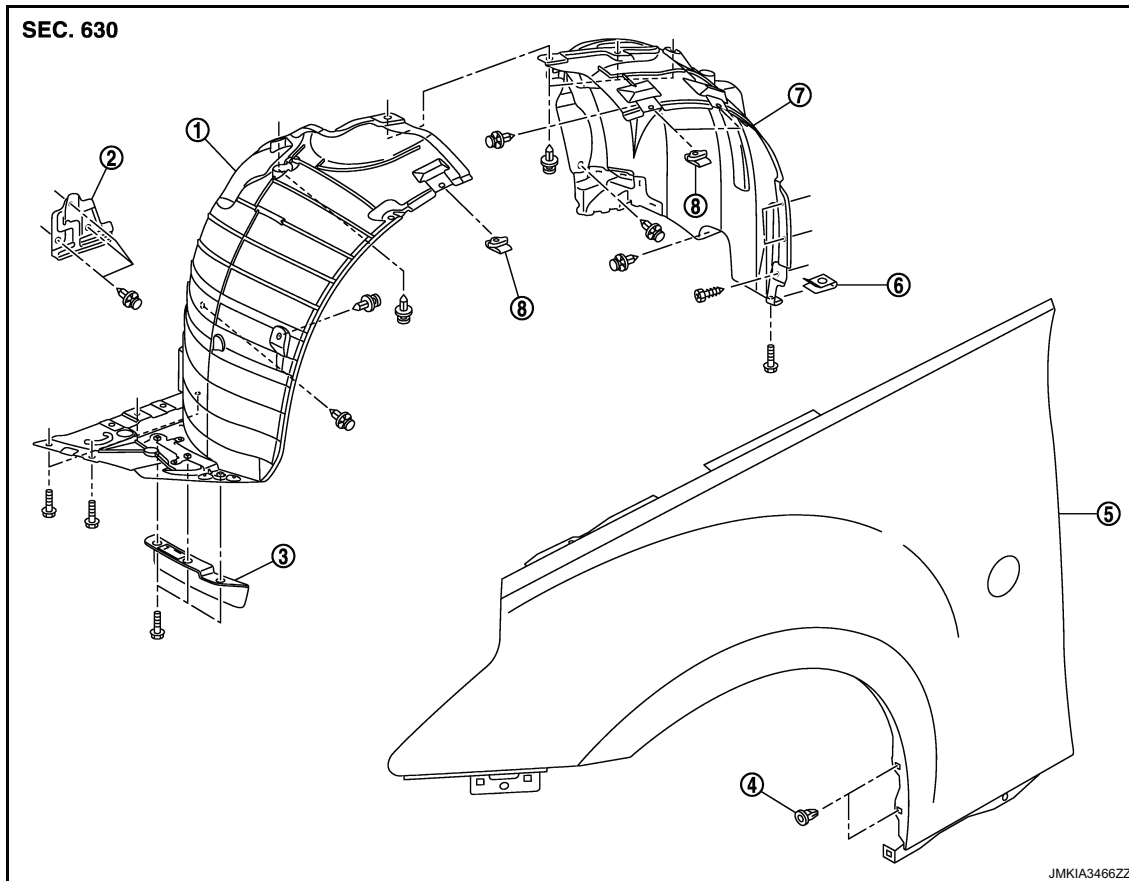


- | | | |
|-----------------------------|-----------------|--------------|
| 1. Fender protector (front) | 2. Splash guard | 3. Air guide |
| 4. Grommet | 5. Front fender | 6. J-nut |
| 7. Fender protector (rear) | 8. Fender clip | |

FENDER PROTECTOR : Removal and Installation

INFOID:000000004466904

REMOVAL

1. Remove front road wheel.
2. Remove splash guard.
3. Remove fender protectors (rear side) fixing screws (A) and bolt (B).

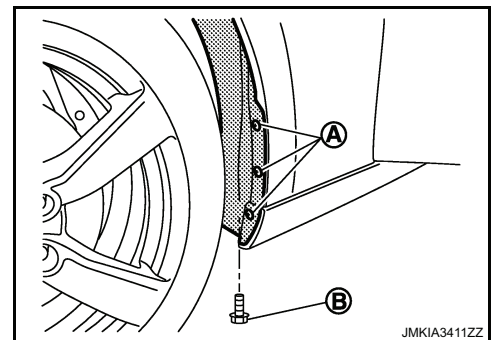

4. Remove fender protector (rear) fixing clips, and then remove fender protector (rear).